



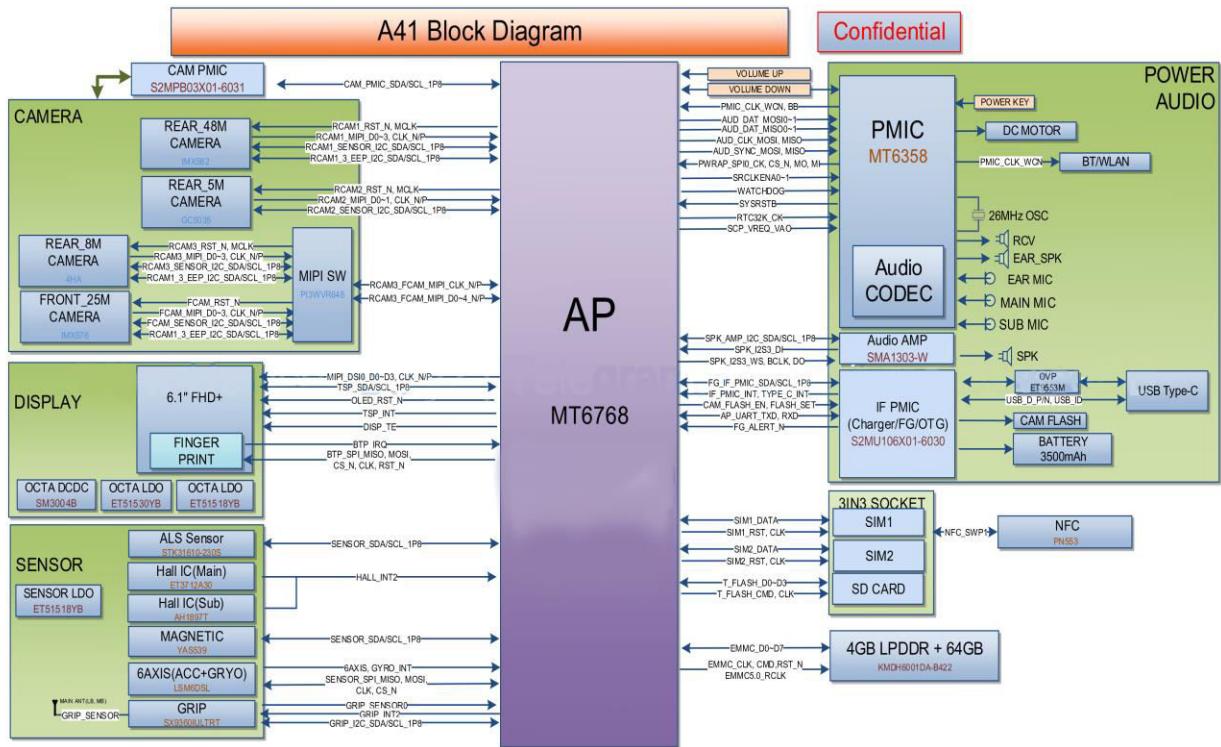


A41 RF Block Diagram

GSM : 850/900/1800/1900
WCDMA : B1/2/5/8
LTE FDD : B1/3/5/7/20/28
LTE TDD : B38/40/41

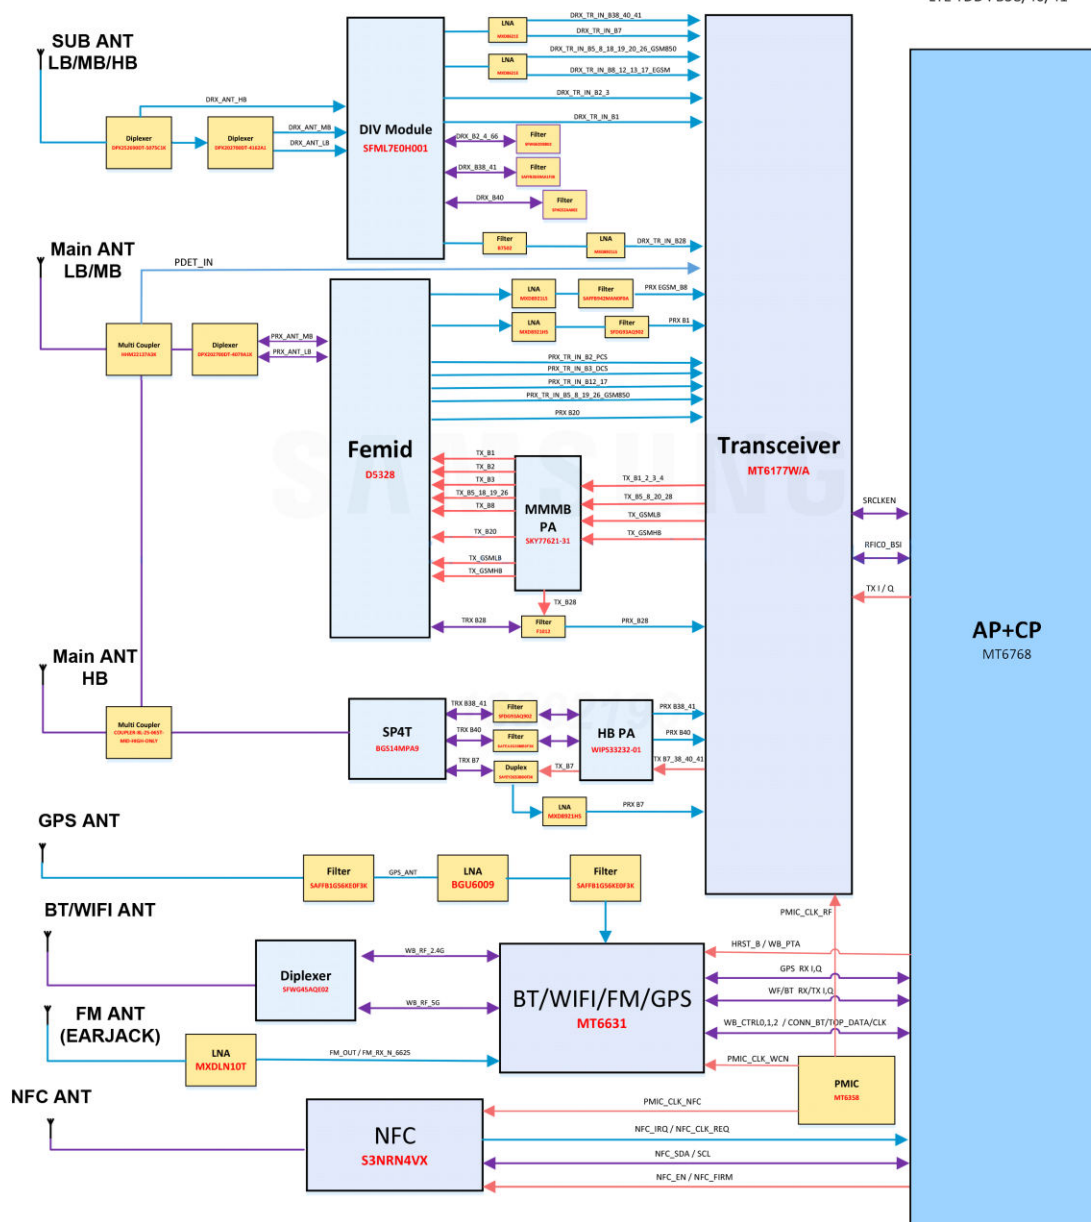


8. Level 3 Repair

8-4-1. Power On

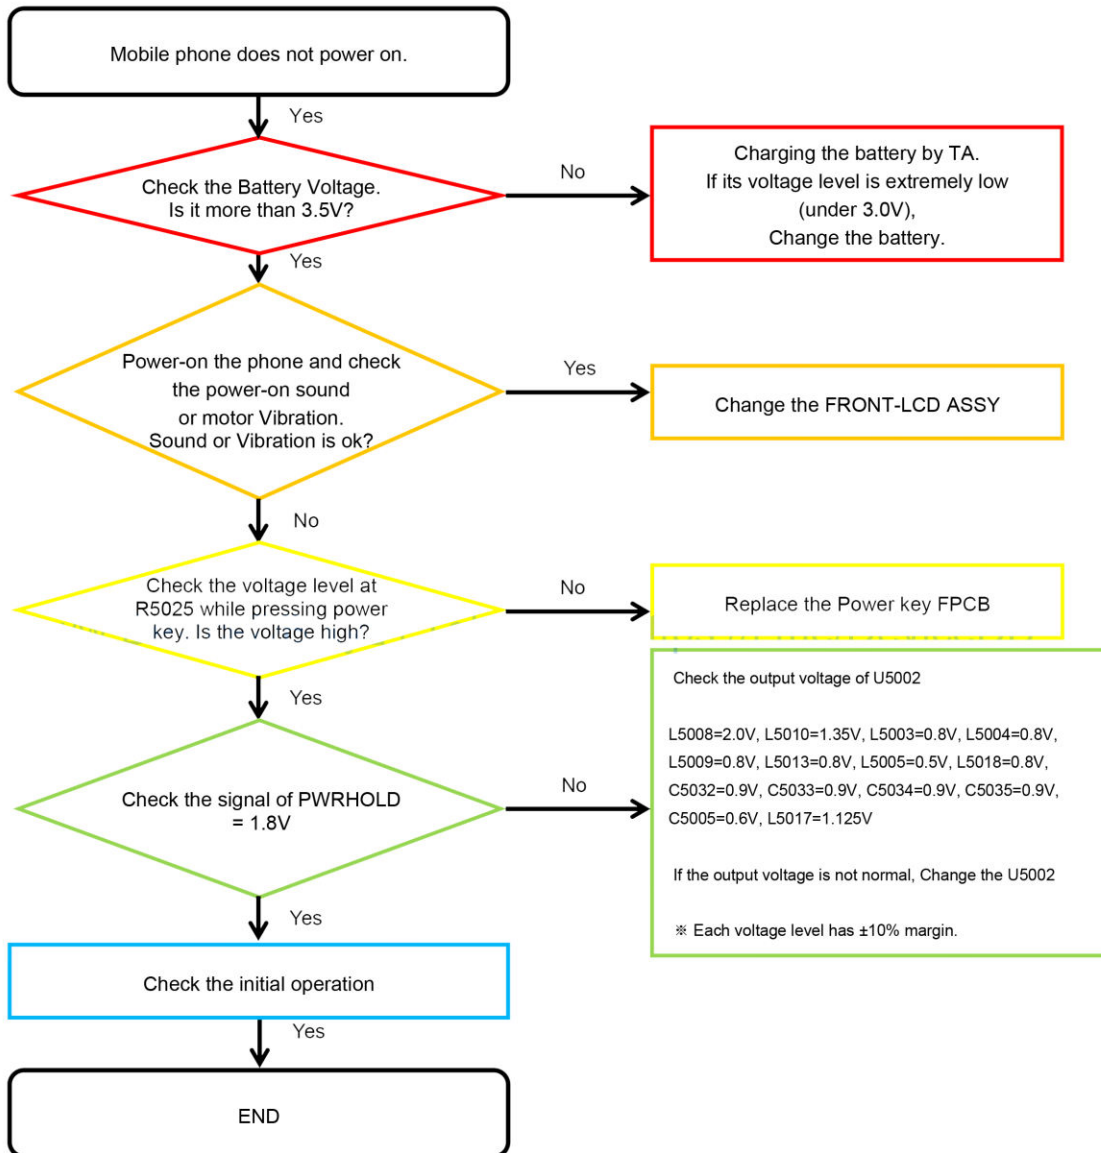


8. Level 3 Repair

8-4-2. Initial

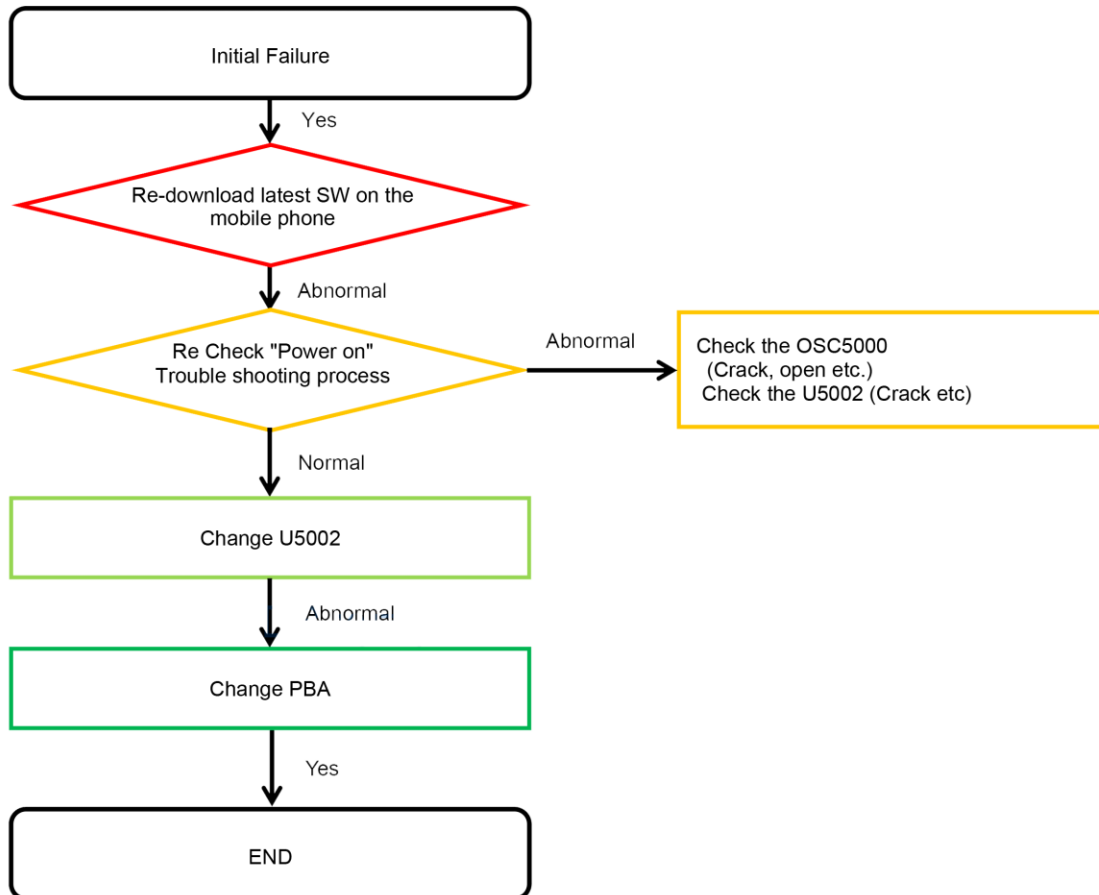


8. Level 3 Repair

8-4-3. SIM Part

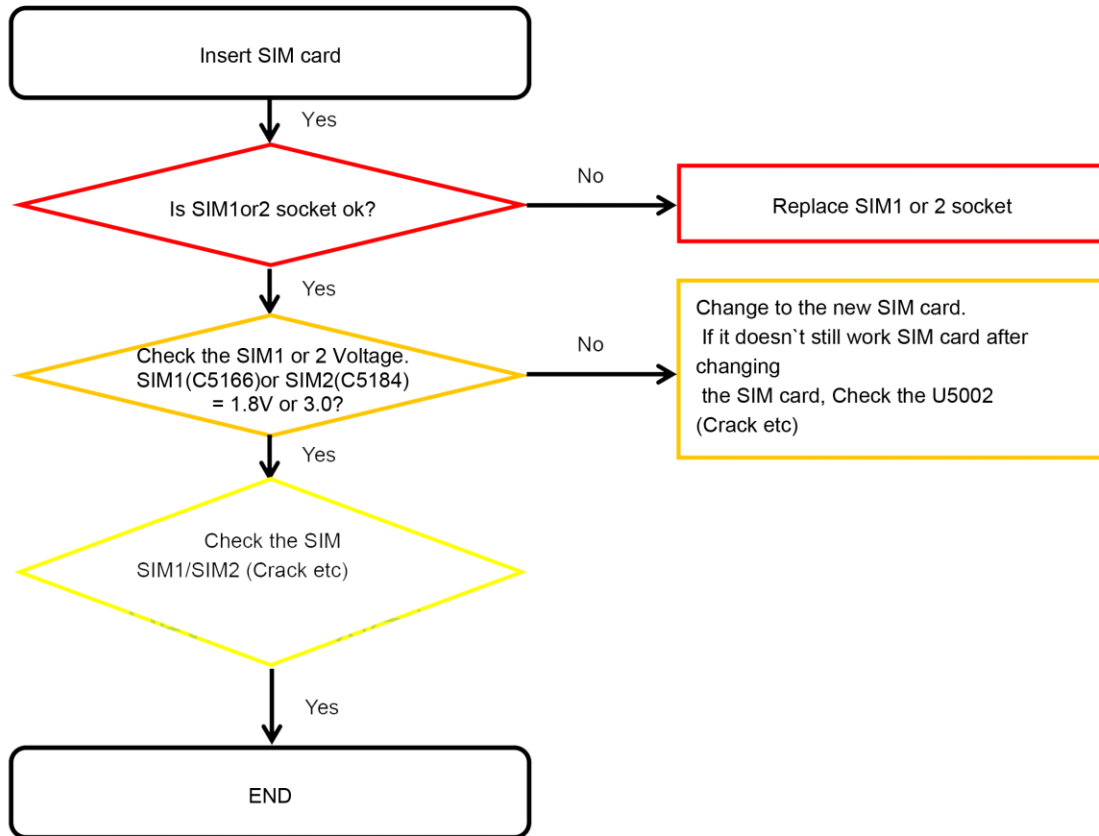


8. Level 3 Repair

8-4-4. T-Flash Part

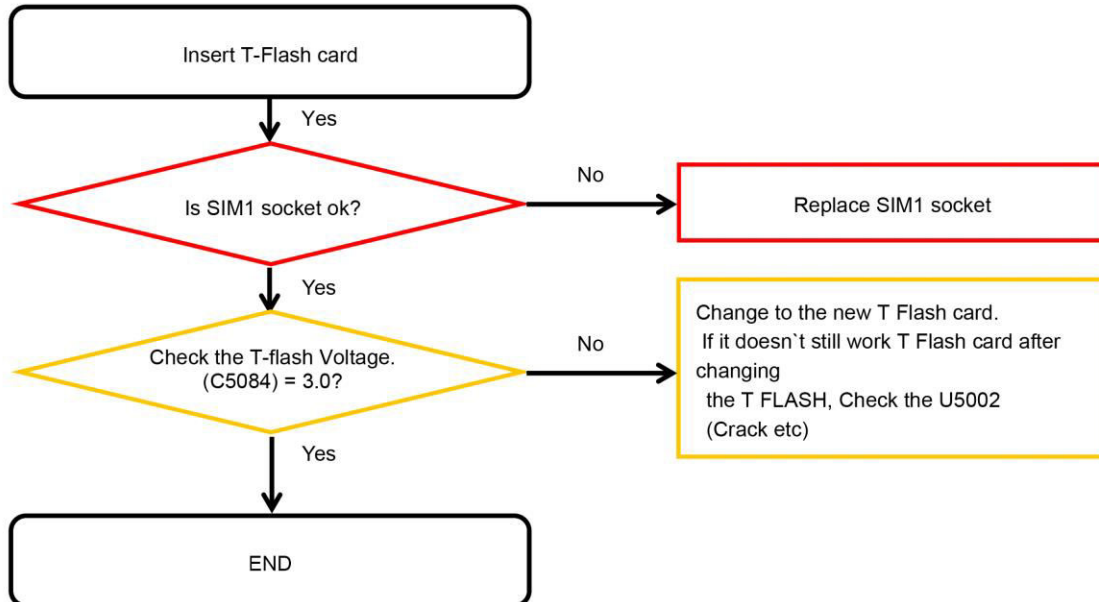


8. Level 3 Repair

8-4-5. Charging Part

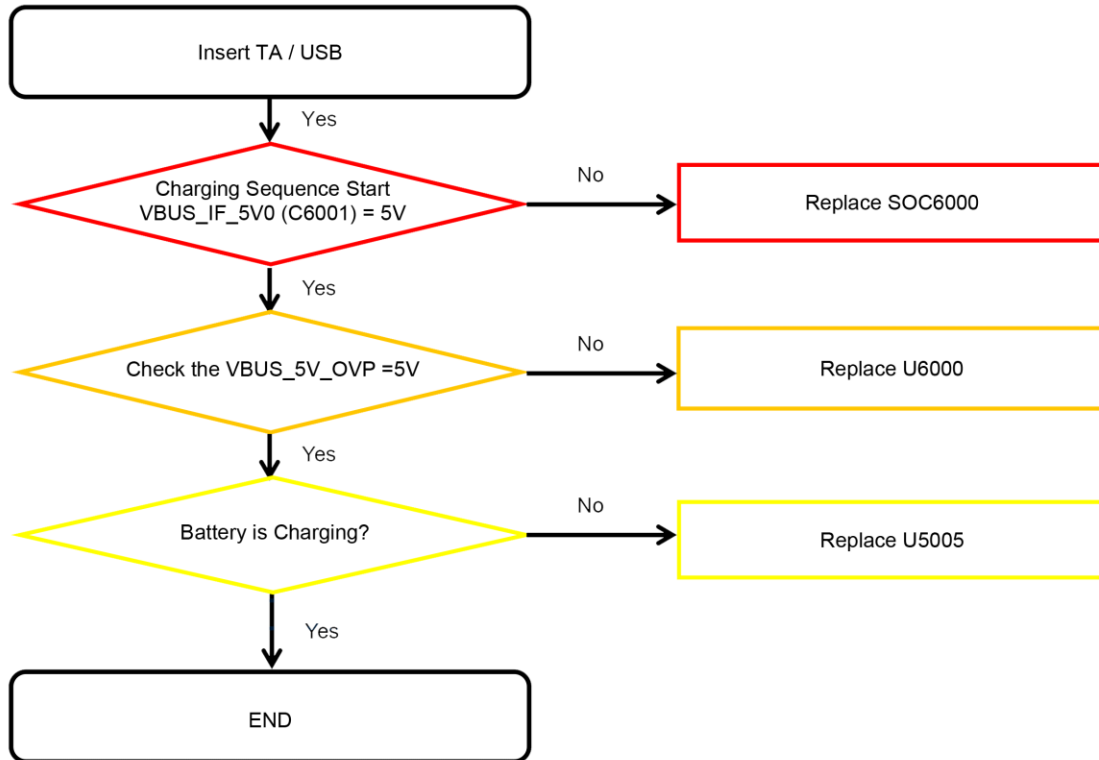


8. Level 3 Repair

8-4-6. Cable Charging Part

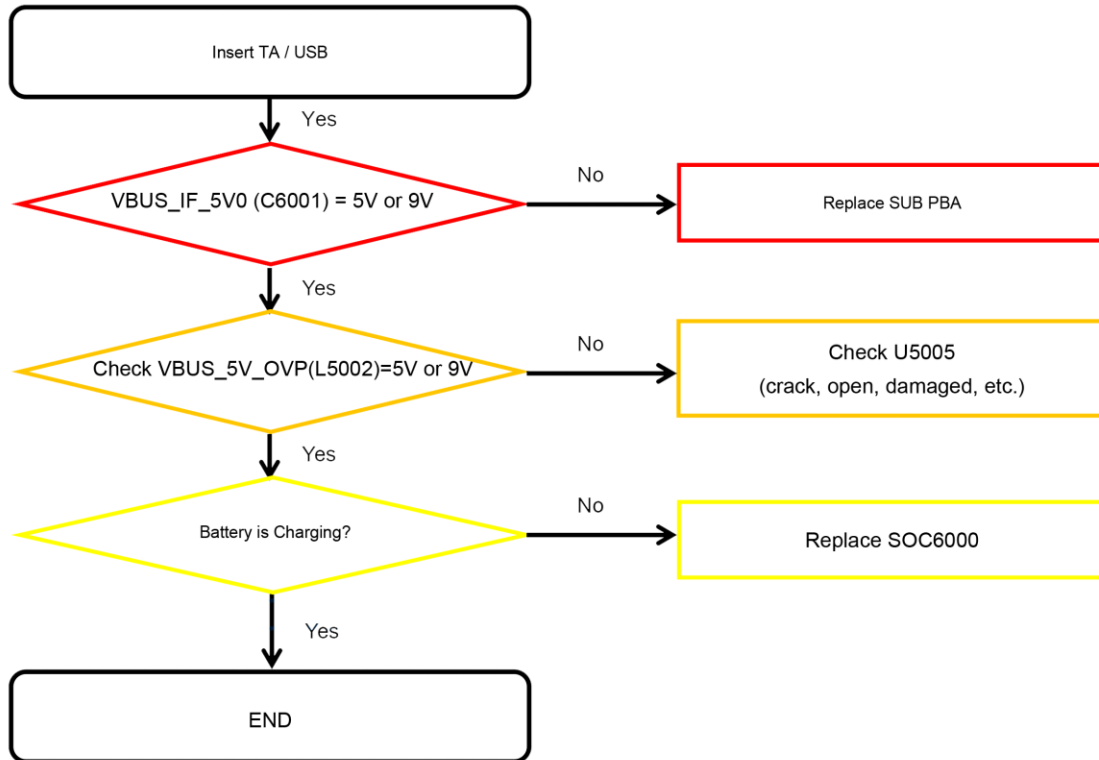


8. Level 3 Repair

8-4-7. 6 AXIS(ACC + GRYO) Sensor

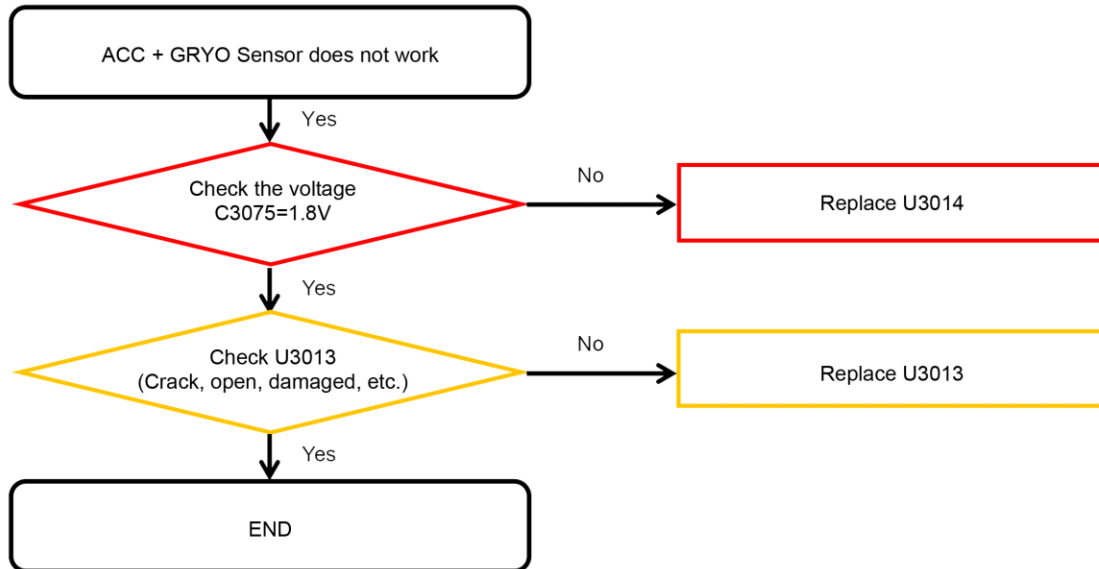


8. Level 3 Repair

8-4-8. Microphone Part - Main MIC

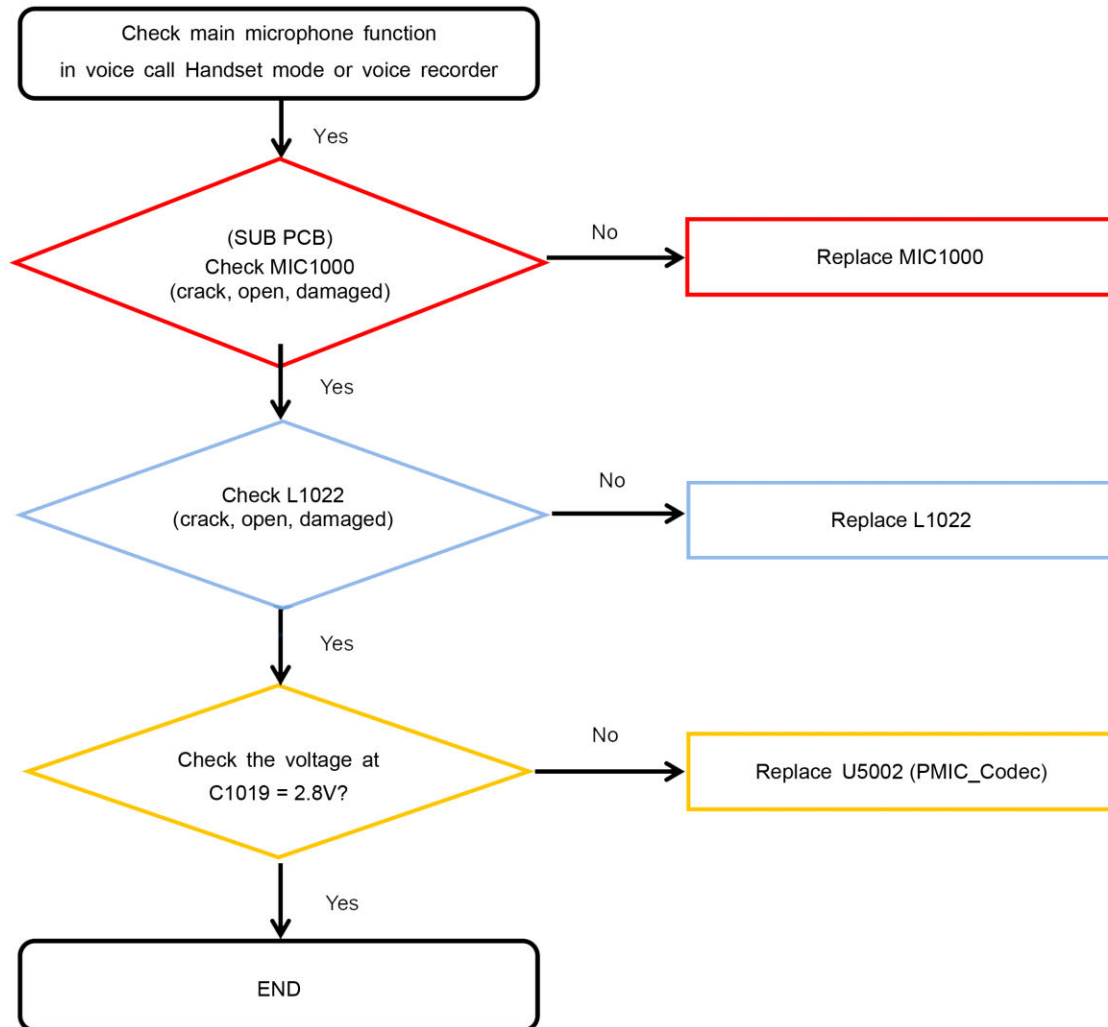


8. Level 3 Repair

8-4-9. Speaker Part

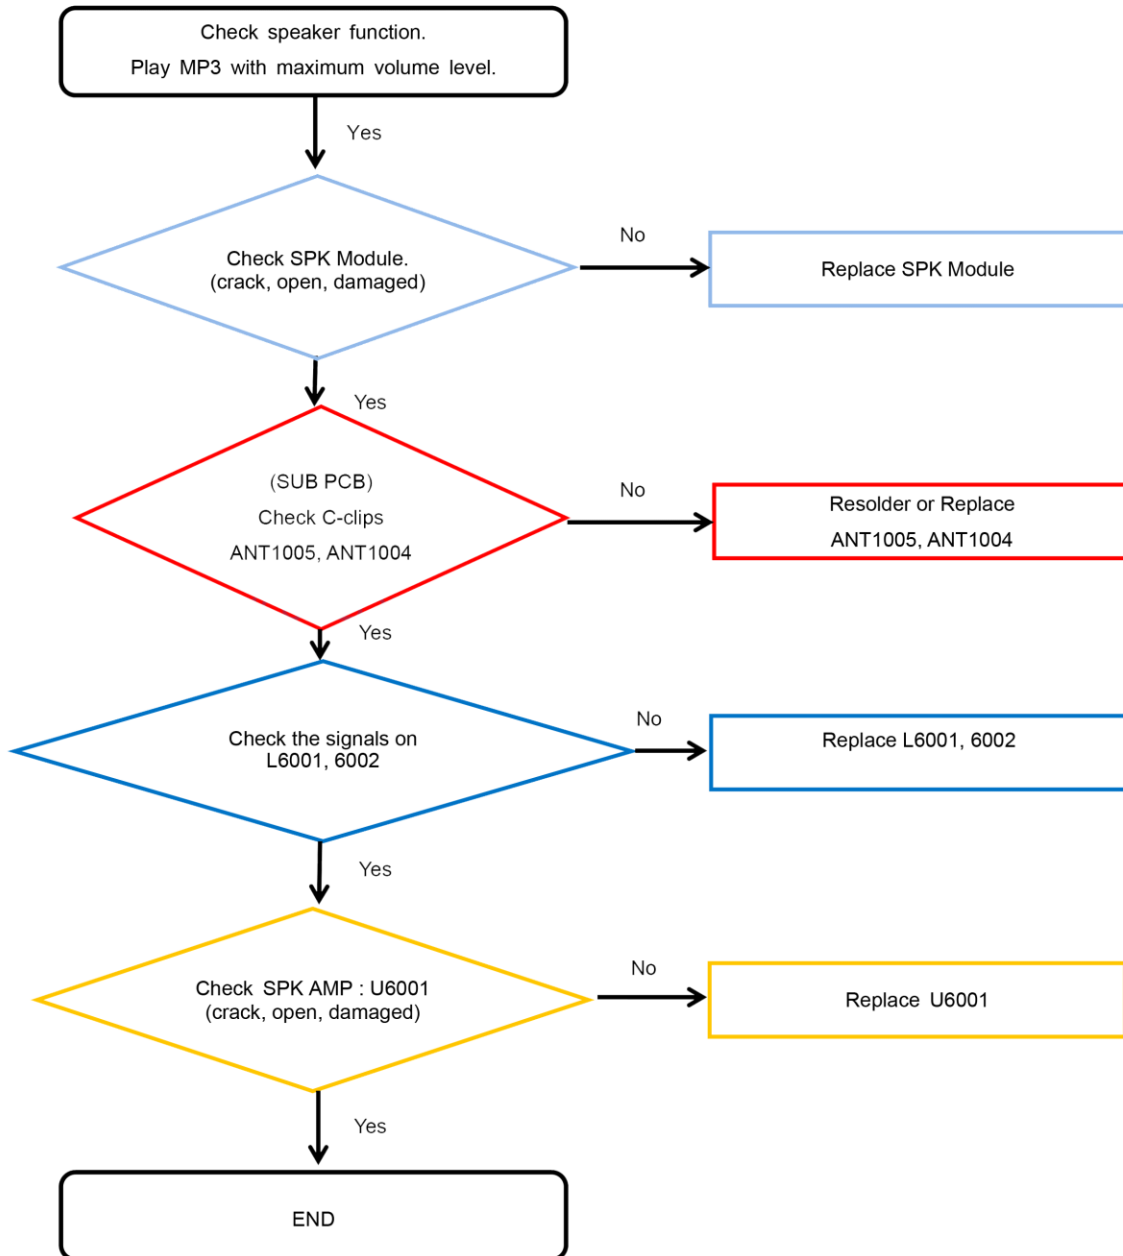


8. Level 3 Repair

8-4-10. Receiver Part

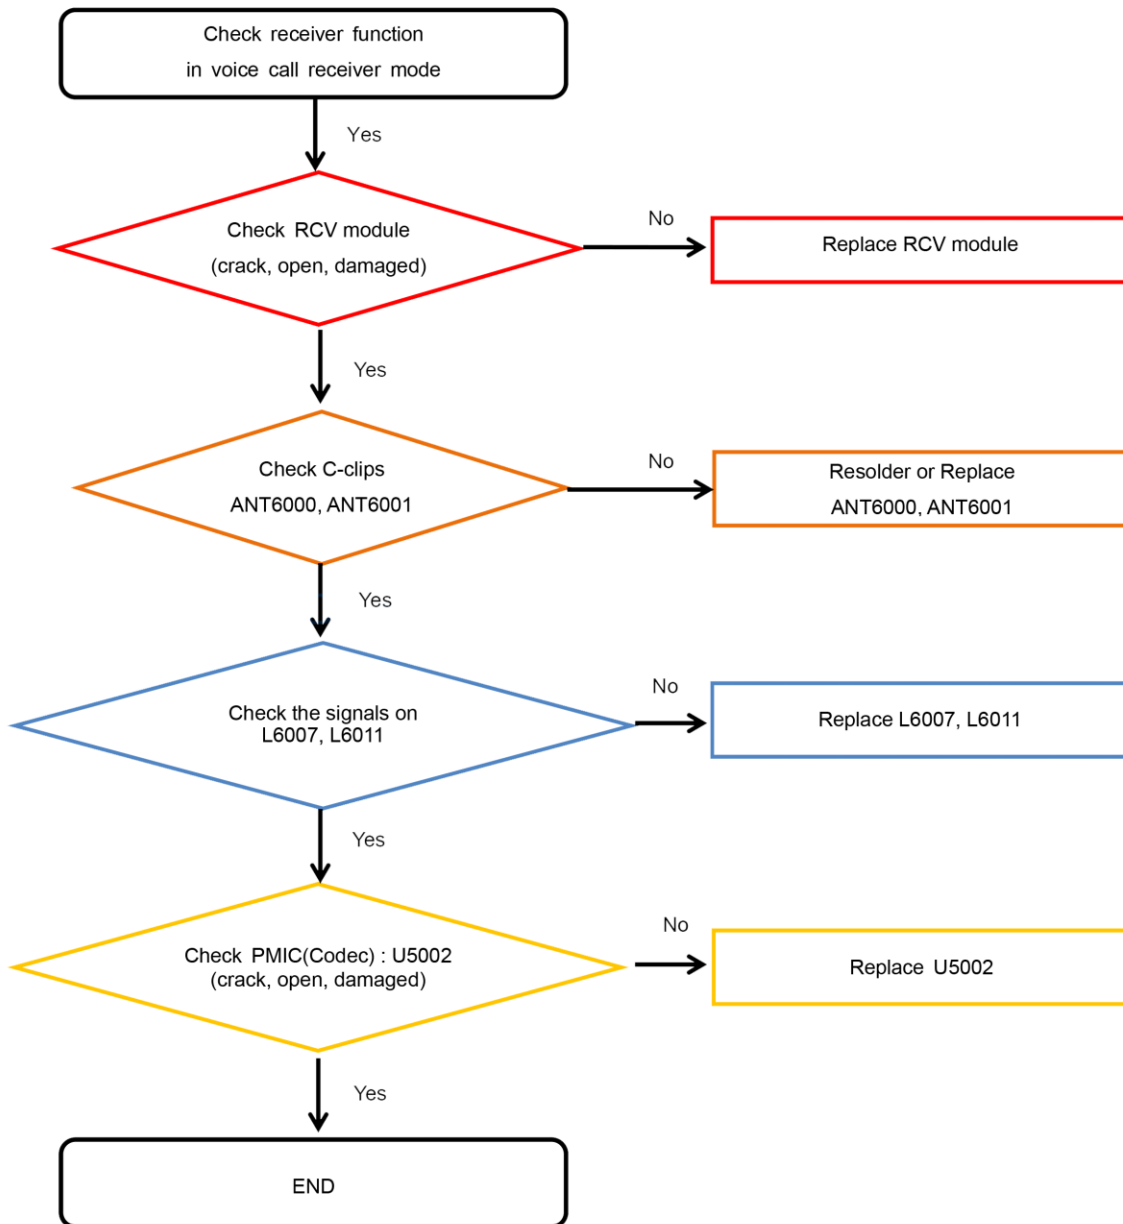


8. Level 3 Repair

8-4-11. BT/WIFI

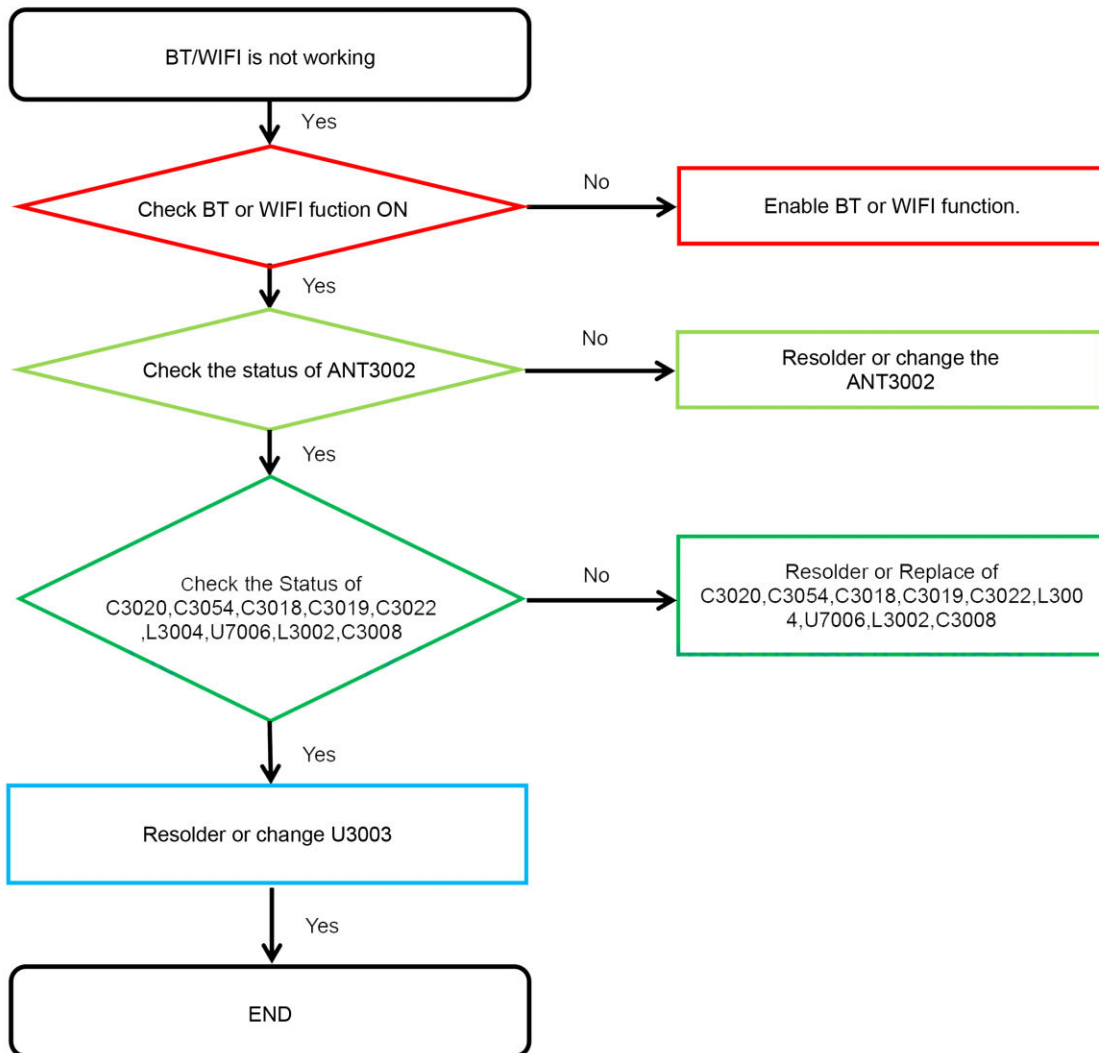


8. Level 3 Repair

8-4-12. GPS

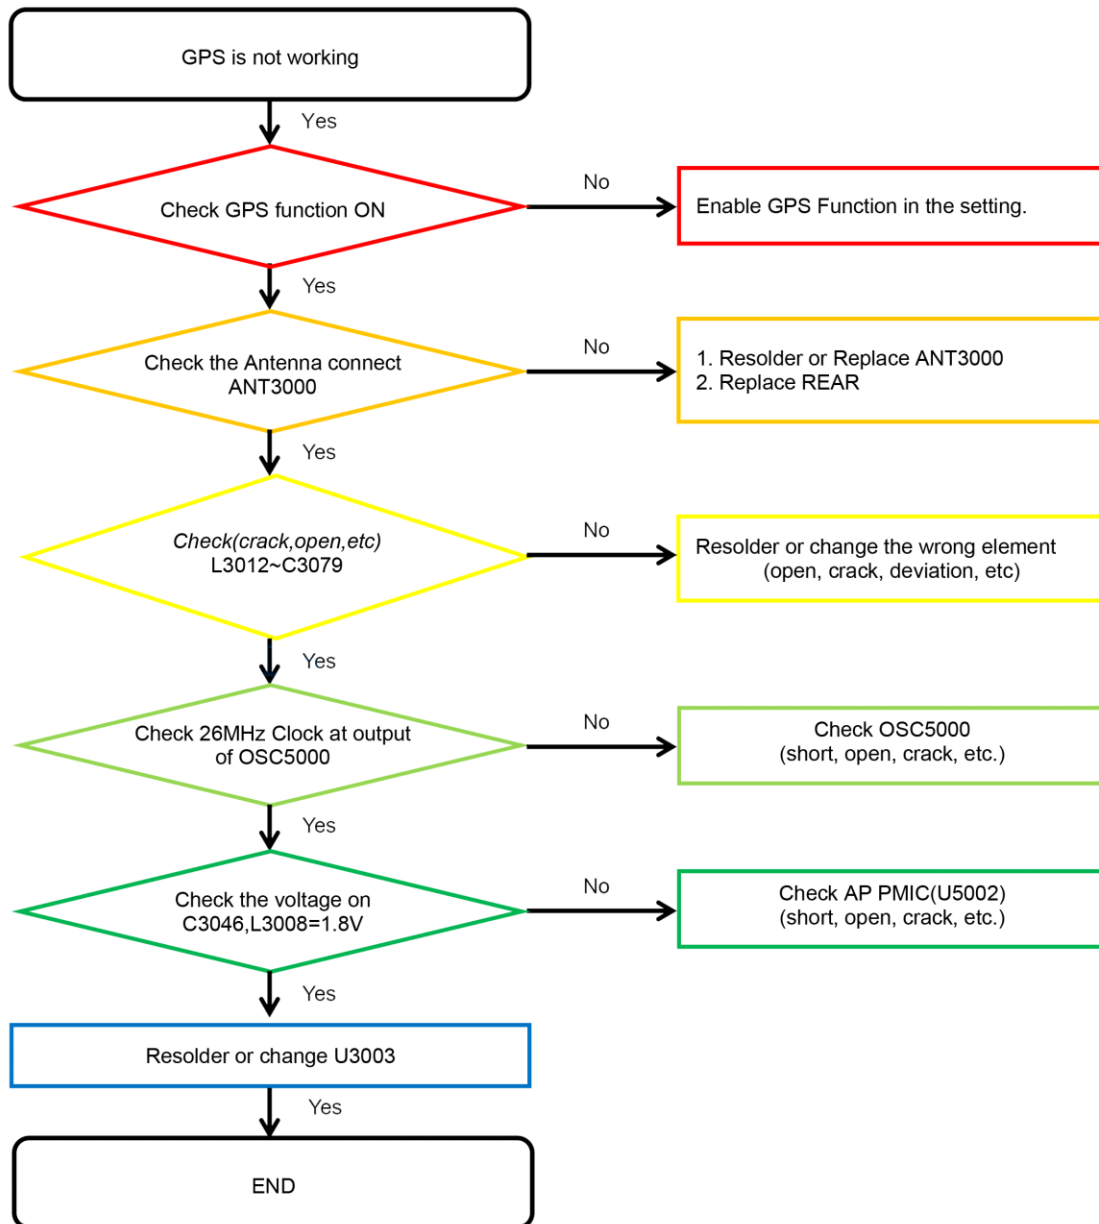


8. Level 3 Repair

8-4-13. FM radio part

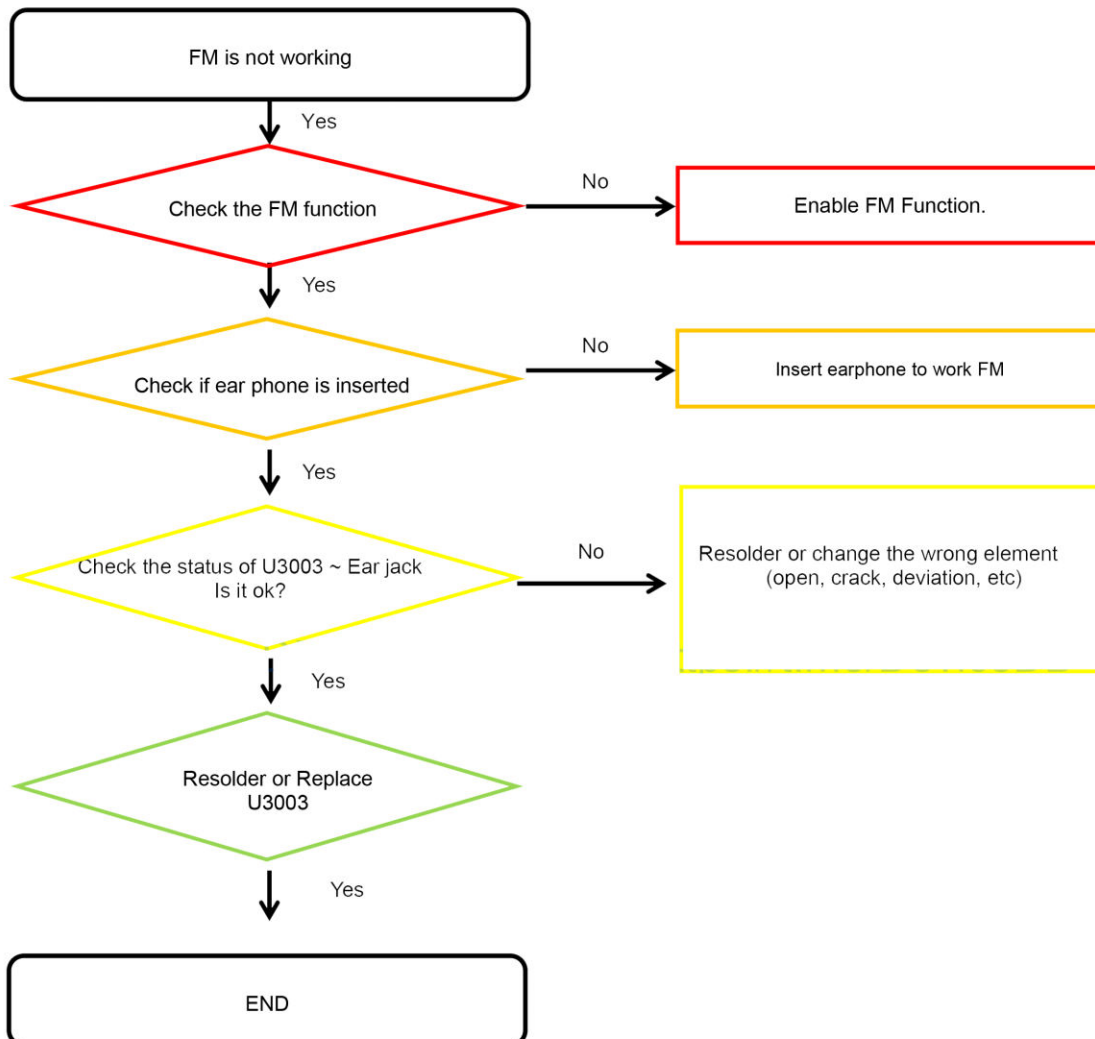


8. Level 3 Repair

8-4-14. NFC

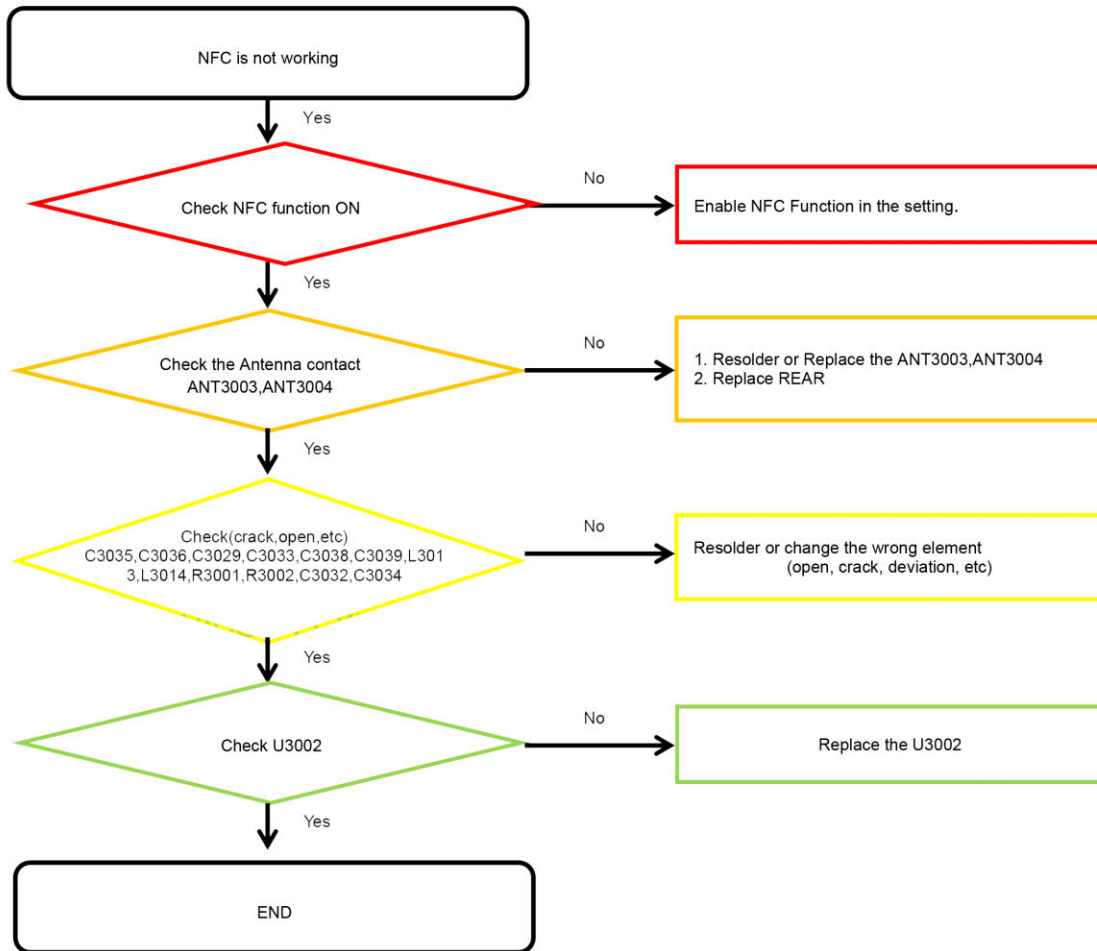


8. Level 3 Repair

8-4-15. Display

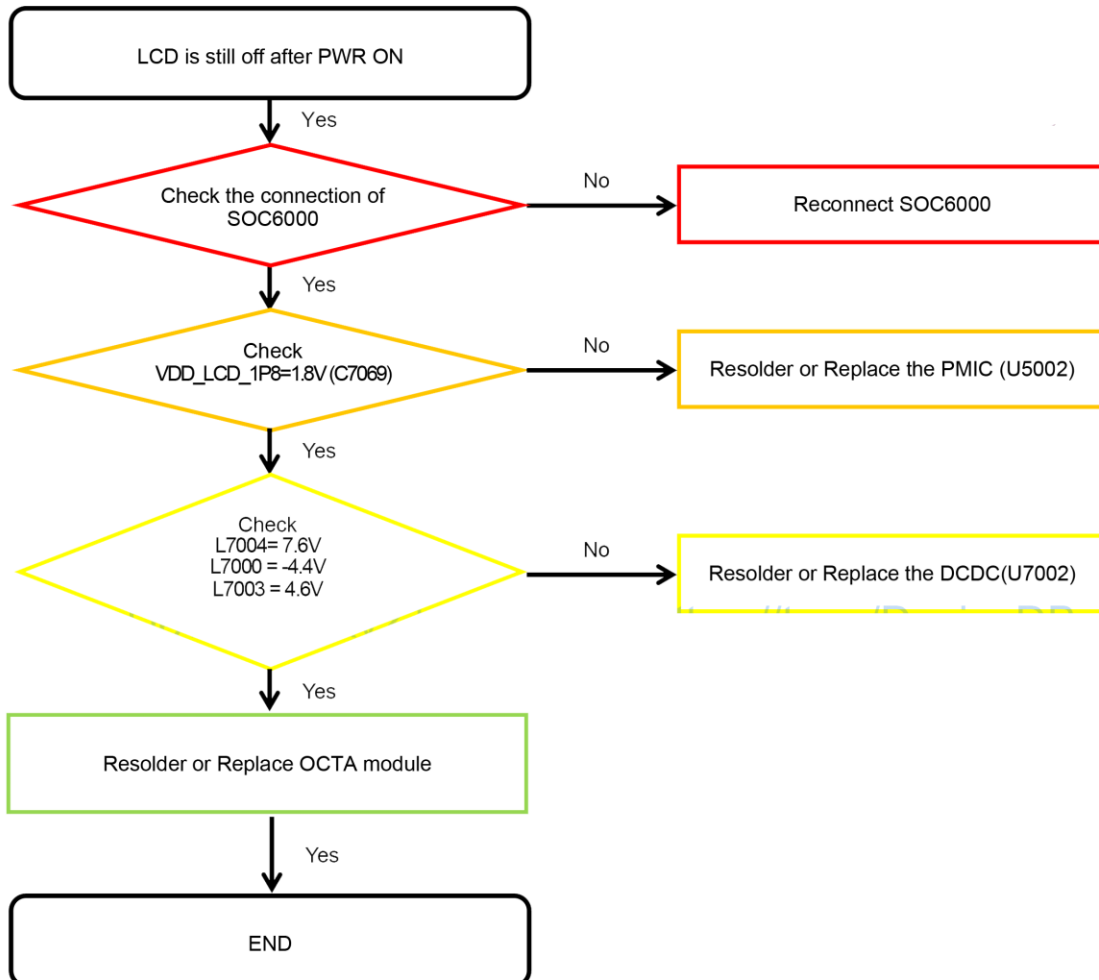


8. Level 3 Repair

8-4-16. Rear CAMERA

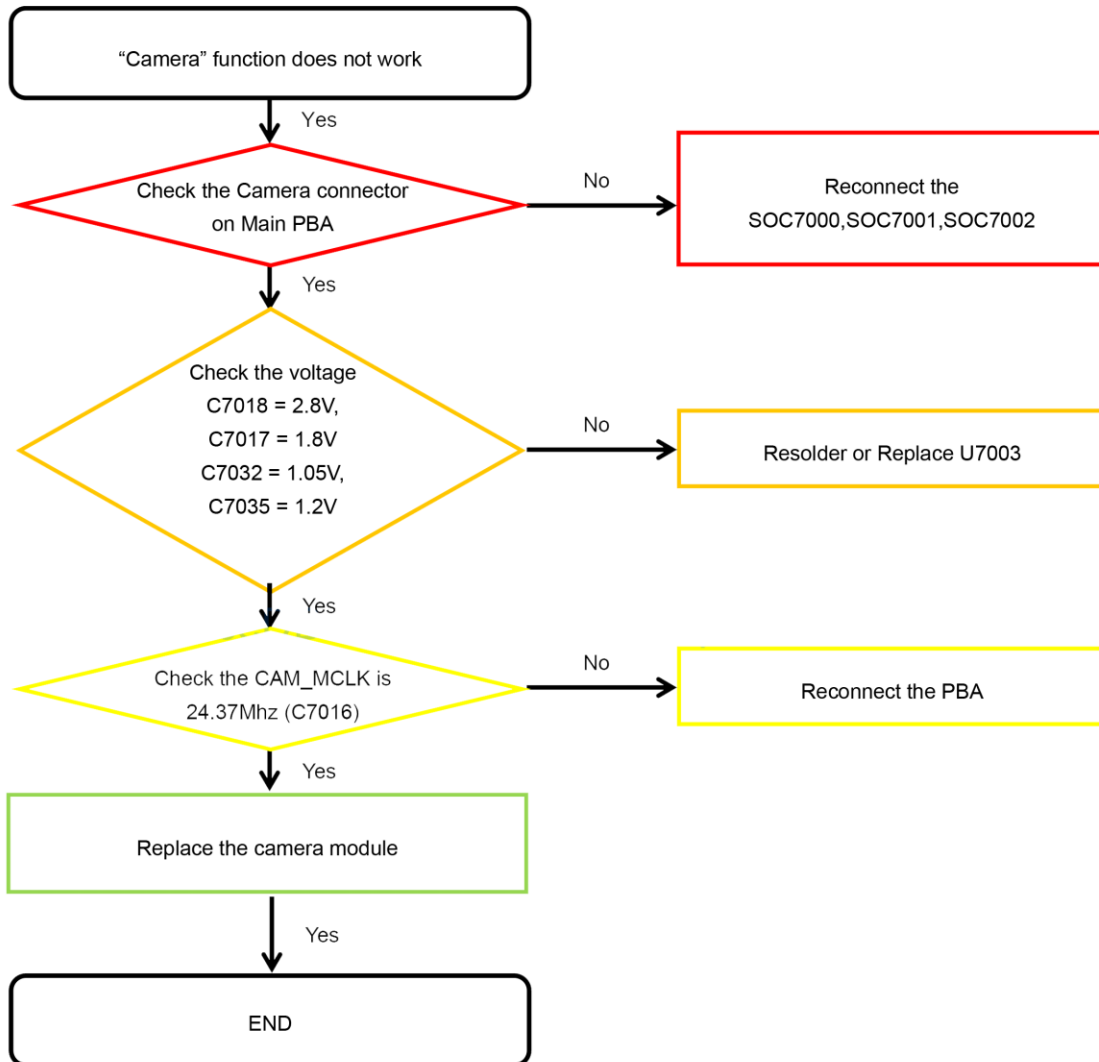


8. Level 3 Repair

8-4-17. Front CAMERA

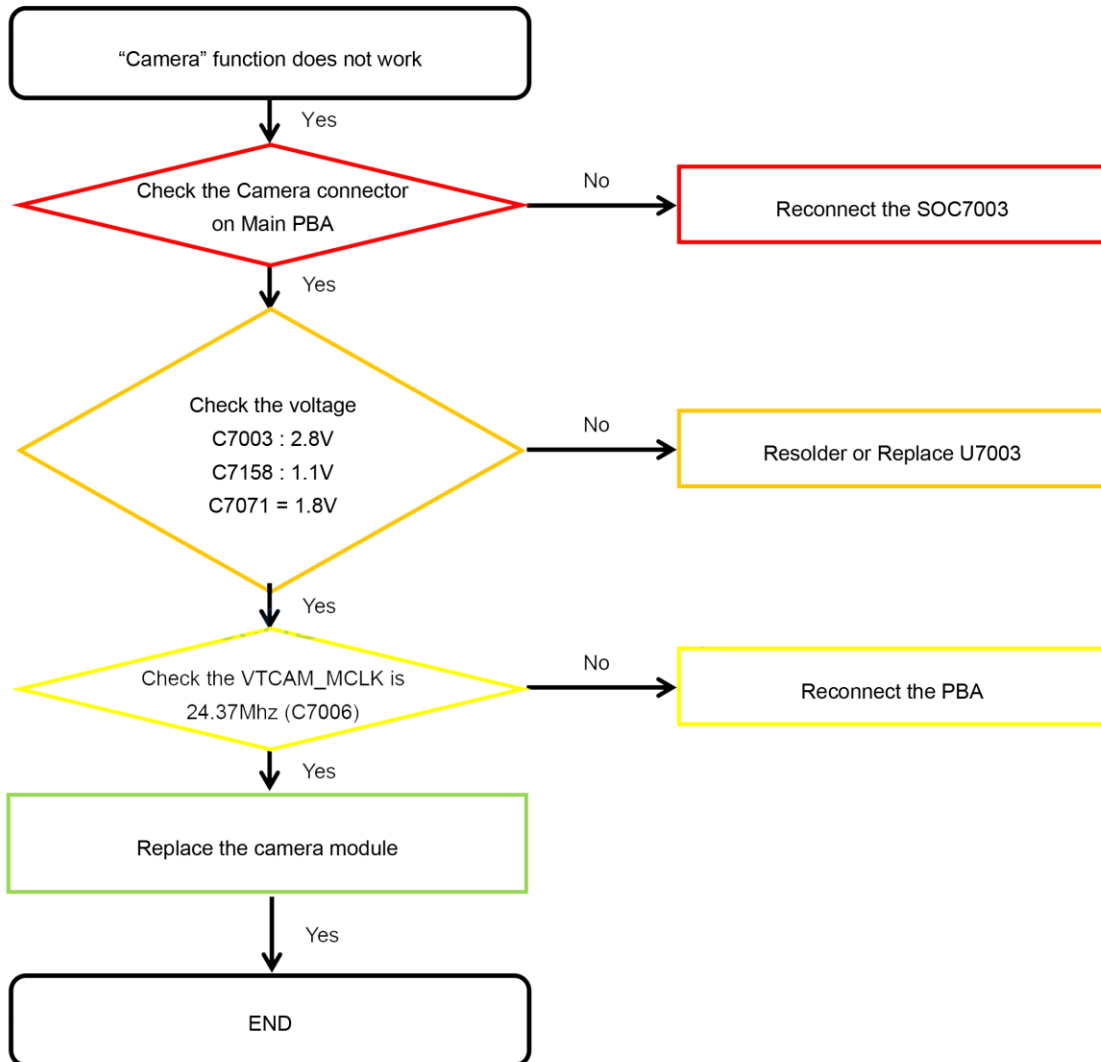


8. Level 3 Repair

8-4-18. Motor

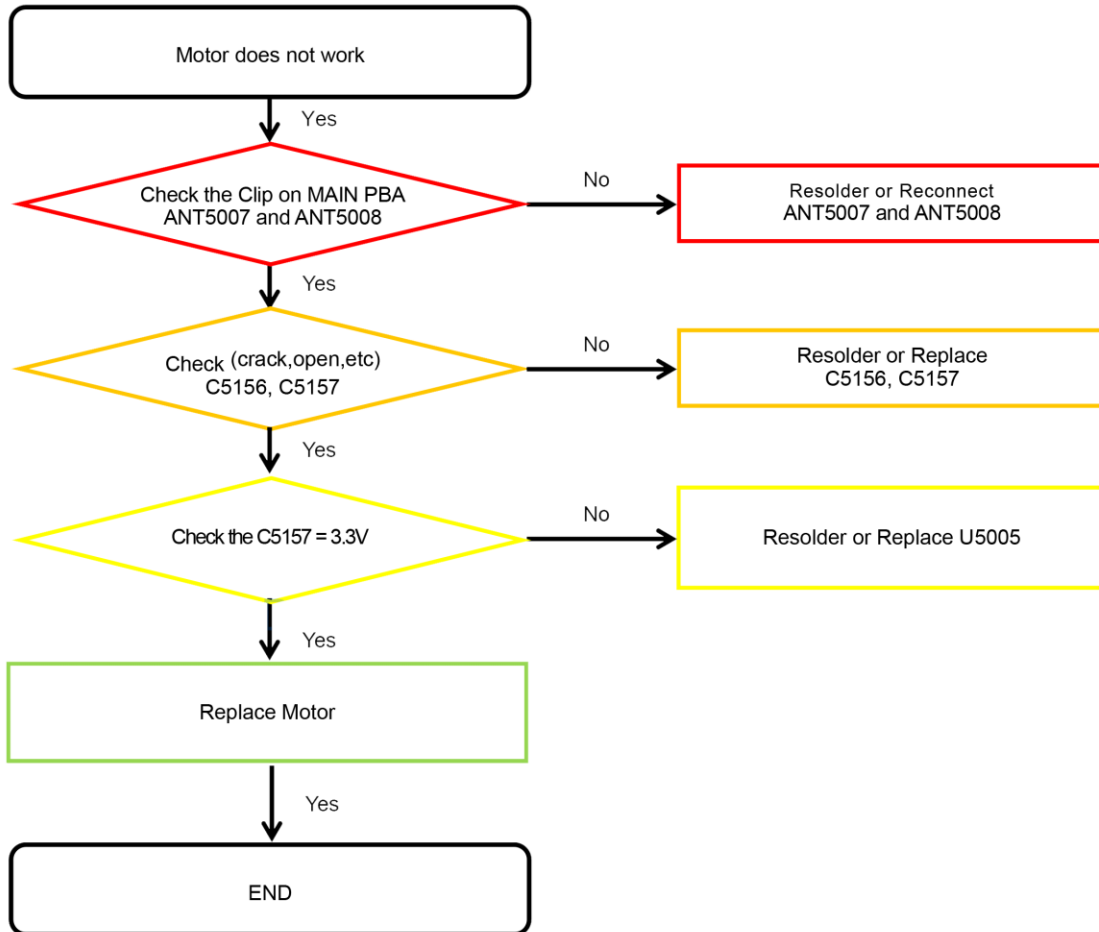

8. Level 3 Repair

8-4-19. GSM/WCDMA/LTE1,3,5,7,8,20,28

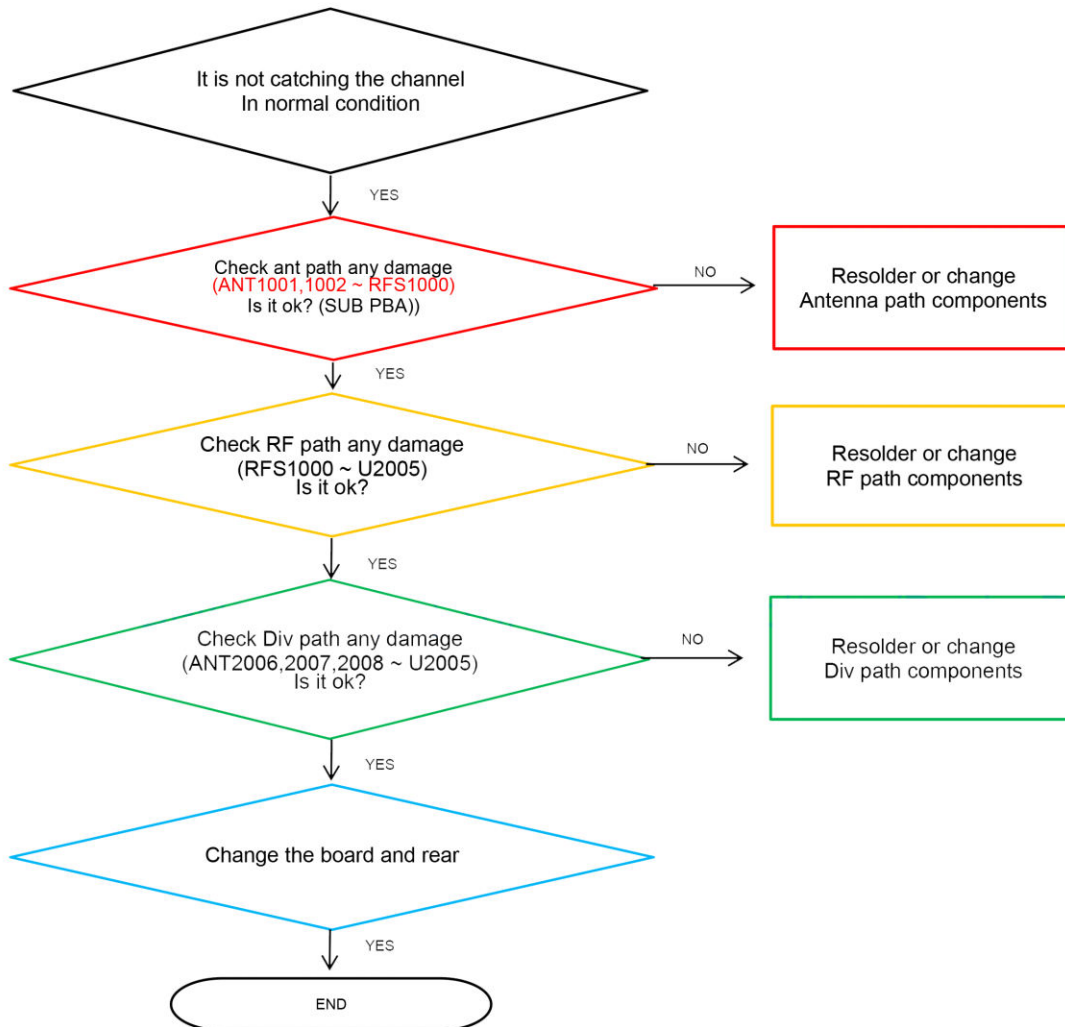

8. Level 3 Repair

8-4-20. LTE7,38,40,41

